


J


Ersatzteile - Spare parts - Pièces de rechange - Reserveonderdelen - Parti di ricambio - Reservedele - Reservdelar
|´p´ñā´ćž .ñóĀúĥ´ëüÊìîÊžWμøp´ÆiüÆüGž!zā´ĆpĒaĥÊāž füÊaÊÆÊāÁØüĒÀžЗапасные части - 备件



① Steuerung	Control unit	
1010/4 BWE		JP47285
1010/4, 1015/4		JP47286
1025/4, 1025/2		JP45786
1035/2		JP45787
② DN 150 / DN 100	DN150 / DN 100	JP48871
③ Klemmflansch	Clamping flange	JP43713
④ Wartungsdeckel	Service lid	JP42798
⑤ Überschiebmuffe	Collar	JP47287
⑥ Behälter	Tank	JP44861
⑦ Steuerungsplatine	Control board	JP47304
⑧ Niveauerfassung	Level control	
4 m Leitung	4 m cable	JP43712
15 m Leitung	15 m cable	JP48227
⑨ Pumpenlüftung	Pump ventilation	JP43710
⑩ Auftriebssicherung	Anti floating	JP43709
⑪ Pumpe	Pump	
1010/4 BWE, 4 m		JP46754
1010/4 BWE, 15 m		JP48684
1010/4		JP45778
1015/4		JP45779
1025/4		JP45780
1025/2		JP48826
1035/2		JP48827
⑫ Elast. Verbindung	Elastic connector	JP43705
⑬ Gehäuse Klappe	Housing valve	JP46813
⑭ Flansch	Flange	JP43706
⑮ Doppelklappe	Duplex flap	JP46812
⑯ Basisplatte	Base plate	JP43714
⑰ Dichtband	Sealing tape	JP47966

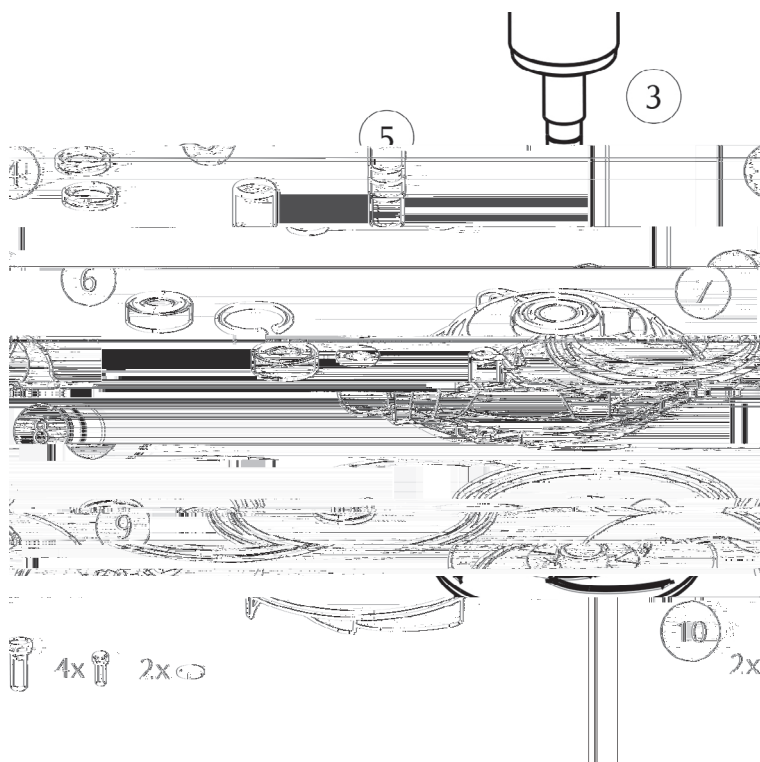

(1) Leitung		Cable
JP43717	10/4, 15/4, 25/4	
JP43721	1010/4 BWI; 4 m	
JP43685	1010/4 BWI; 15 m	
Stator + Housing	(2) Stator + Gehäuse	
10/4, 15/4	JP43722	1010/4
BWI		
Welle	Rotor shaft	(3) Rotor
15/4, 25/4	JP45791	10/4,
BWI	JP46801	1010/4
abdichtung	Motor seals	(4) Motor
idbefestigung	Impeller fixation	(5) Laufz
10/4, 15/4, 25/4	JP46800	
1010/4 BWI		
(6) Lagersatz	Bearing set	JP4687
(7) Lagerschild	Bearing housing	JP467
(8) Dichtungssatz	Seal set	JP468
(1) Laufrad		1010/4 BWI
10/4	JP45793	
15/4	JP45794	
25/4	JP45795	

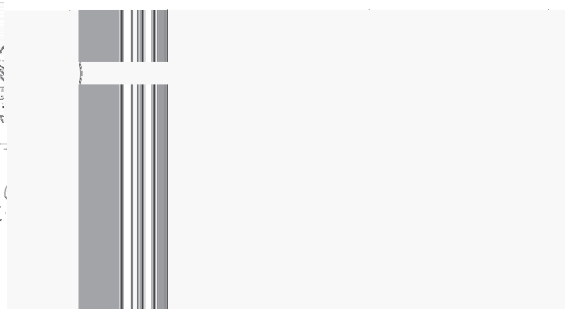

UC 25/2 - 35/2

b

①	Leitung	Cable	JP43717
②	Stel	Stel	ror
